

Use this pattern to make a 7 ½"
x 9 ⅜" picture frame. Cut out
the top and bottom designs, or
only the top or bottom as
desired.


**WP-1804 PICTURE FRAME
PATTERN by
OTB PATTERNS.**

**© 2018 Outside the Box Patterns
All Rights Reserved**

Note to Professional Copy Services - The
copyright owner grants you permission to make
copies for the purchaser of this pattern who
states the copies are for personal use.


WP-1804 PICTURE FRAME PATTERN by OTB PATTERNS.

Find more free or inexpensive scroll saw
patterns at www.otbpatterns.com

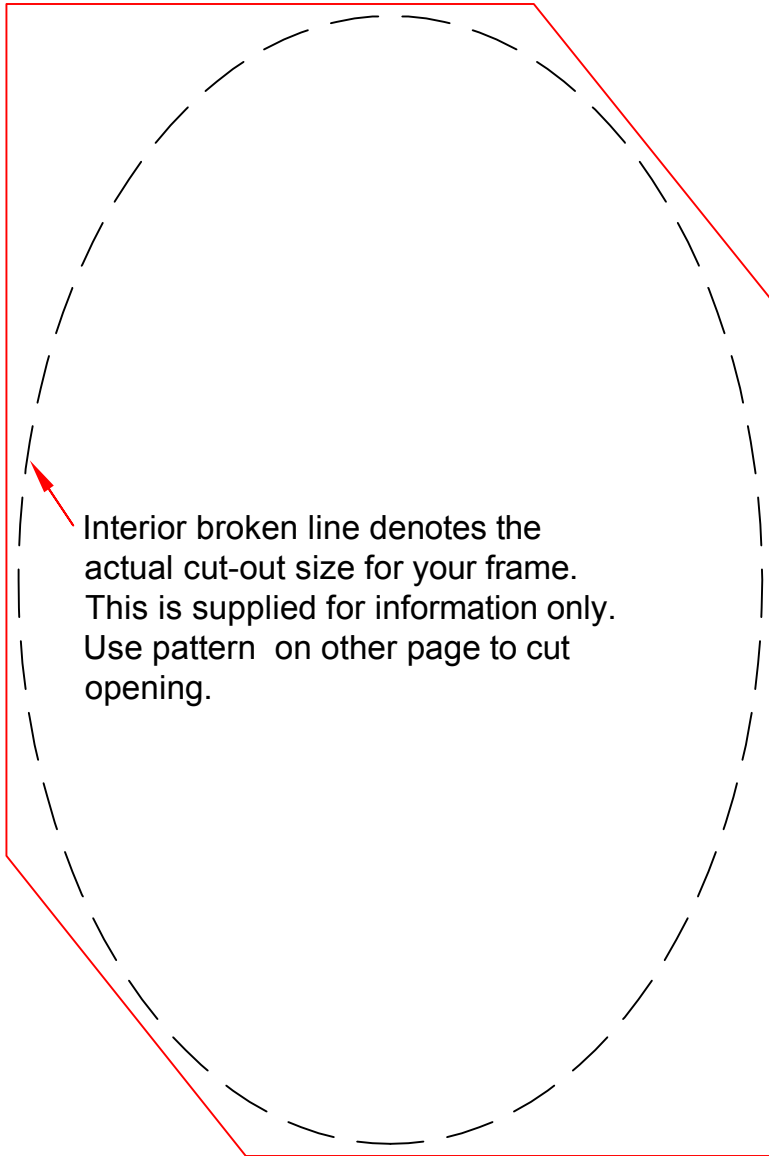

Interior broken line denotes the
actual cut-out size for your frame.
This is supplied for information only.
Use pattern on other page to cut
opening.

You may make a back for
your frame that is the same
size as the frame, or if you
wish your cut-outs to be open,
use this line for back pattern.
Use brads to attach to frame.

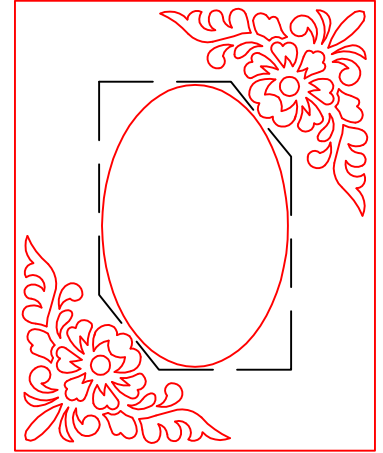

**© 2018 Outside the Box Patterns
All Rights Reserved**

Note to Professional Copy Services - The
copyright owner grants you permission to make
copies for the purchaser of this pattern who
states the copies are for personal use.