
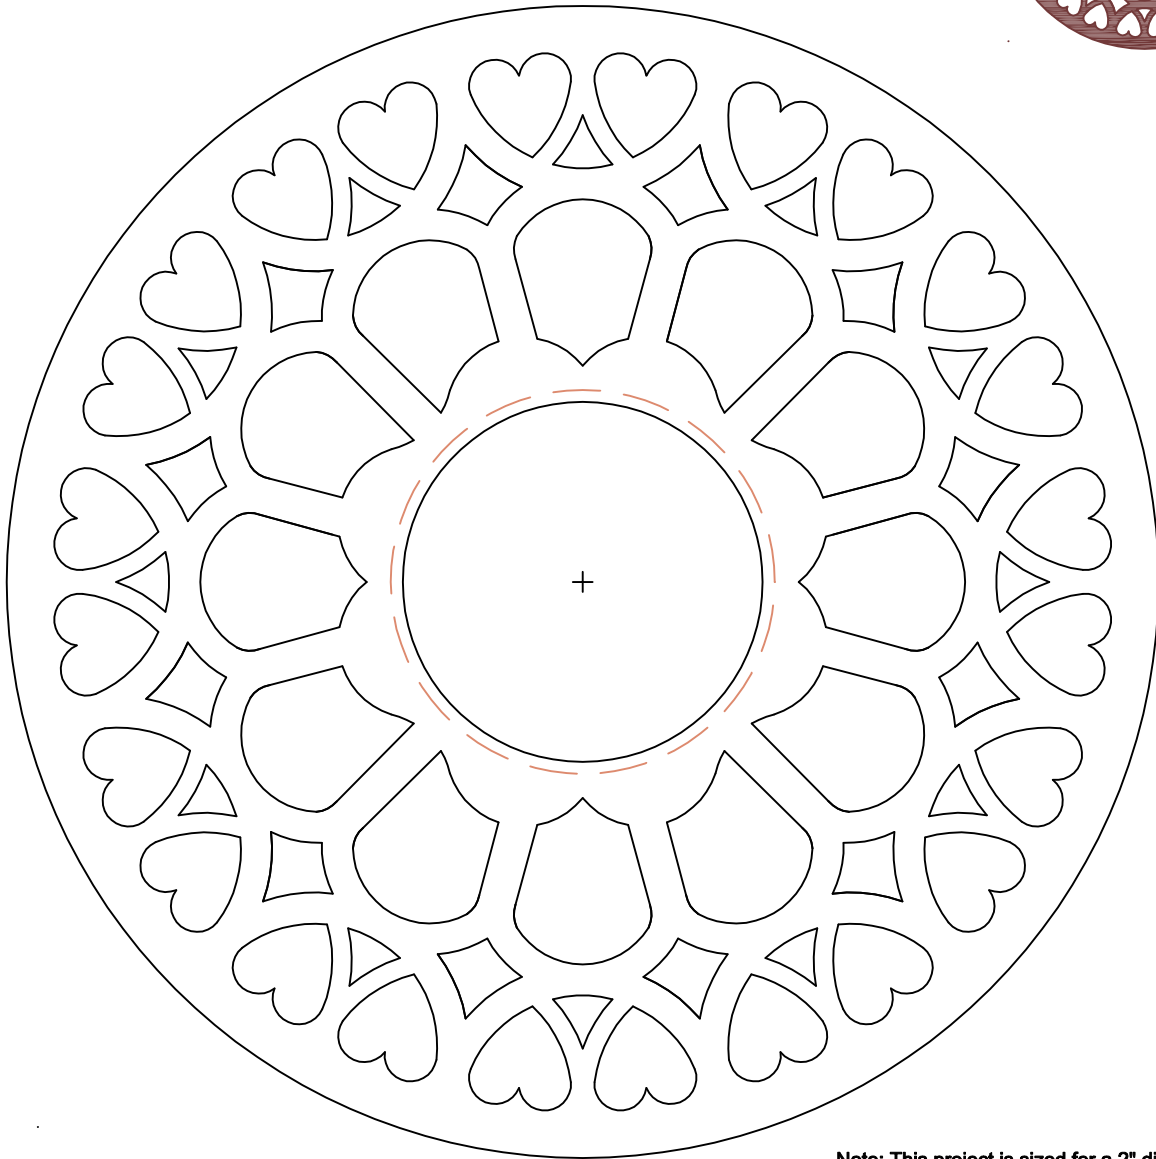


WP-1828 HEART CIRCLE  
CLOCK PATTERN  
by OTB Patterns.

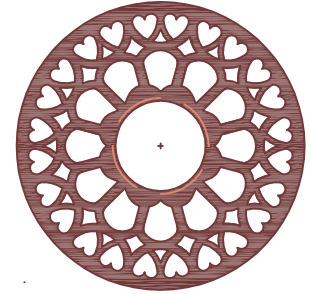

Note: This project is sized for a 2" diameter Clock insert ( $1\frac{7}{8}$ " actual insert diameter). See [www.otbpatterns.com](http://www.otbpatterns.com) for more information on clock inserts, if required. Adjust center hole size for other clock size. Carefully start and stop your scroll saw blade following the lines as noted on the drawing.

1. Start with a piece of material about about 6" OR 7" square.
2. Drill  $1/16$ " dia. hole near each interior line. Use the drill holes to insert your blade. When completed, trim all cuts with razor knife and sand with 150 grit sandpaper. Stain or paint as desired.

© 2018 Outside the Box Patterns  
All Rights Reserved

Note to Professional Copy Services - The copyright owner grants you permission to make copies for the purchaser of this pattern who states the copies are for personal use.